


STEEP SPIRAL

PURPOSE
MAINTAIN A CONSTANT GENERAL POSITION
WHILE LOSING ALTITUDE TO MAKE
A LANDING.

CLEAR THE ENGINE EVERY 360° TO AVOID FOULING SPARK PLUGS
OR SHOCK-COOLING THE ENGINE

CLEAR ON UPWIND TO MINIMIZE DRIFT

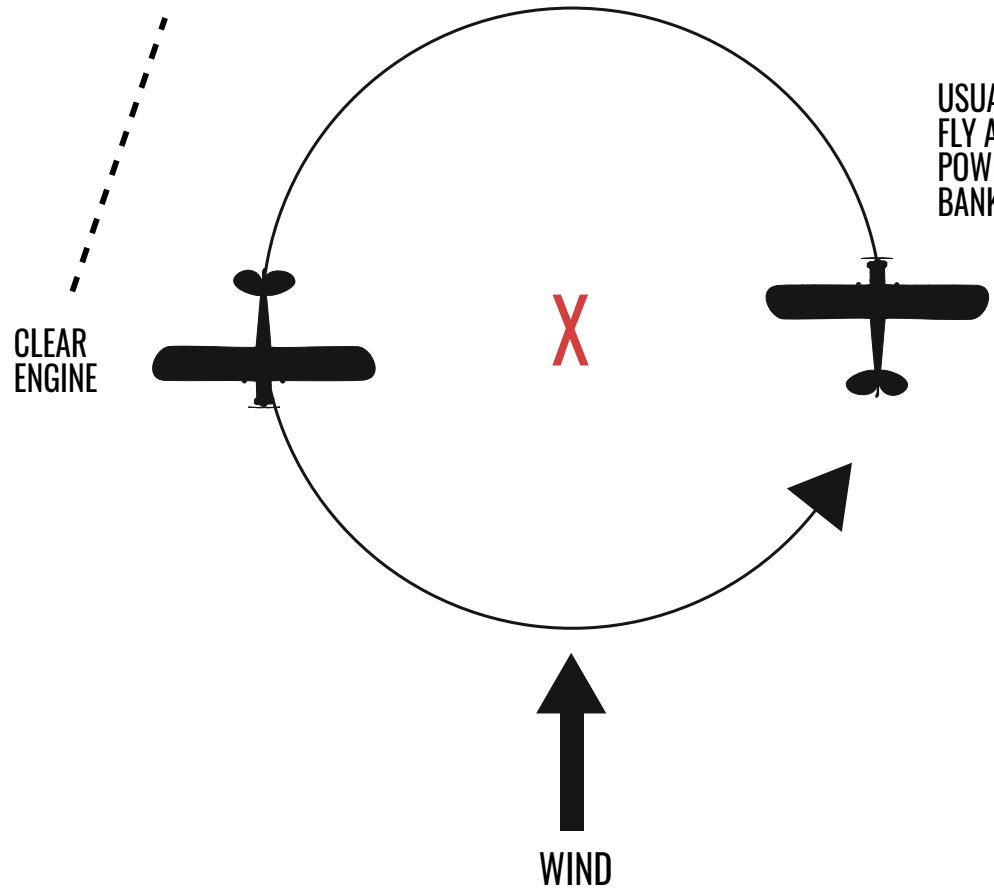

USUALLY START FROM AT LEAST 5,000 'AGL
FLY ALMOST DIRECTLY OVER TARGET
POWER IDLE
BANK UP TO 60°

